

# ATA PTX5 Remote Coding Instructions

---

## Programming the transmitter into your motor

1. Press and hold the blue Door Code button on the motor, or SW1 / SW2 on the receiver board
2. Press the transmitter button you would like to use to control the door for two seconds
3. Release and pause for two seconds. Press the same button again for two seconds
4. Release the Door Code or SW button
5. Press the transmitter button to test the operation of the door/gate, etc

## Programming your transmitter using an existing remote

1. Take any pre-coded transmitter. Press and release the button that you normally use to open your garage
2. Using a small needle, press and hold the little button at the bottom of the coding hole firmly for two seconds. The coding hole can be found in the middle of your existing, genuine remote
3. WITHIN 10 SECONDS, choose a button on your new remote that you want to use to open your garage door
4. Hold the new transmitter's button for two seconds, pause for two seconds, and then hold again for two seconds, and then release
5. Wait for 10 seconds and then press the new transmitter's button to test

To delete all of the transmitters that has been coded into the motor

1. Turn off the opener
2. Press and hold the Door Code or SW1 Button
3. Turn on the power again, while holding the button. After about 15 seconds, the coding LED will illuminate to indicate that the receiver's memory has been deleted
4. Press the transmitter button to test that the transmitter no longer works – all codes, including the courtesy light codes, are now wiped